

LED L3 (Auto)

LED L4 (Door Open)

JUMPER OFF


JUMPER ON



Switch excluded



Switch enabled

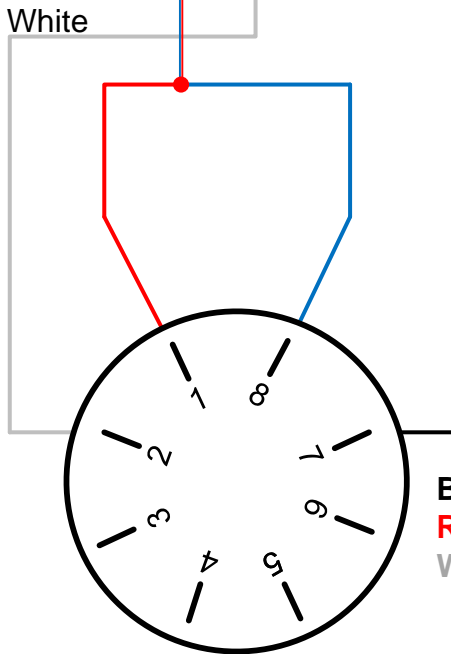

NOTE: Switch Exclusion Jumper
This Jumper must be removed for the external key switch to function correctly.

Black – Terminal 8
Red & Blue – Terminal 9
White – Terminal 10

Position 3
Close Digiway terminals 8 & 9

Position 1
All terminals open

Position 2
Close Digiway terminals 9 & 10

